

Instructions for using Interdigital Transducers

Interdigital Transducer Institut de Soudure

Lorenzo Capineri, Lorenzo Taddei


Initial product

Interdigital Transducer

N# electrodes: 14

Pitch: 1.6 mm

CODE: IDTTLC00014016

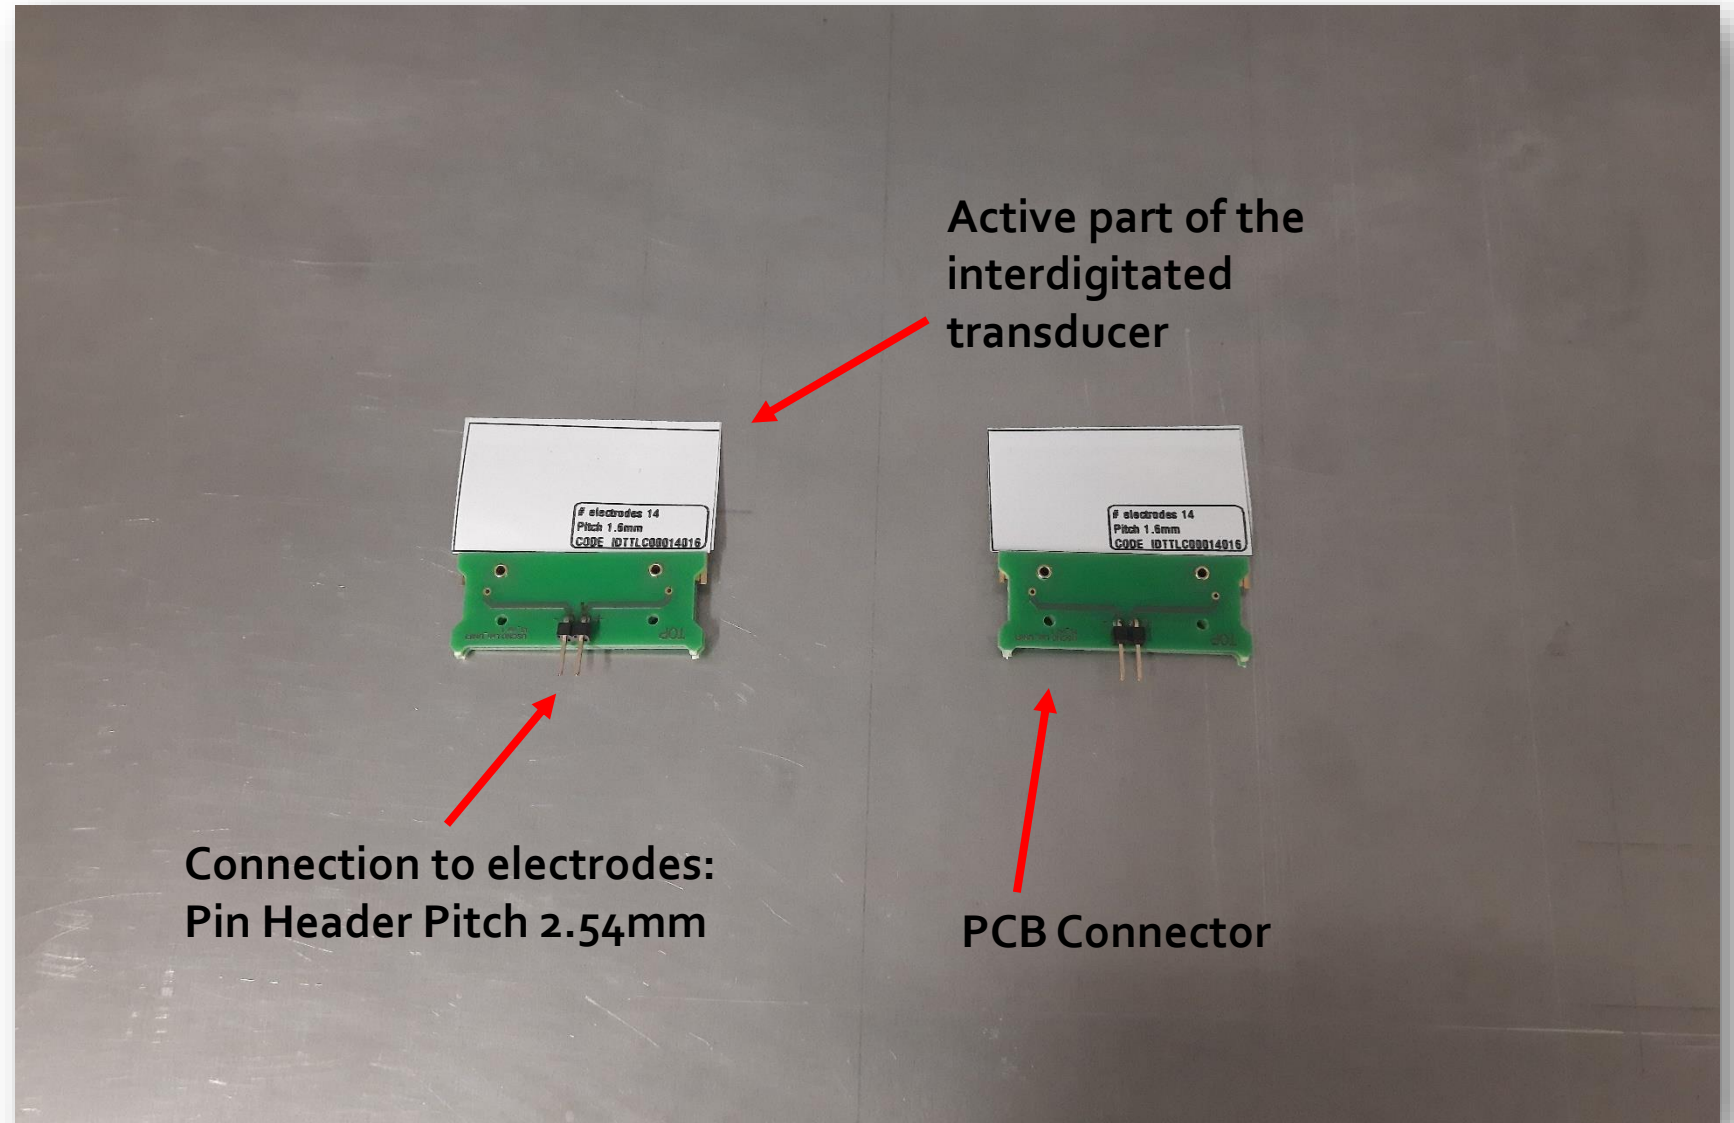

Material

Double-sided adhesive tape.

Precision pliers


Scissors



Step 1.0: Double-sided adhesive tape

Step 1.0:


Cutting double-sided adhesive tape, larger than the area of the transducer.

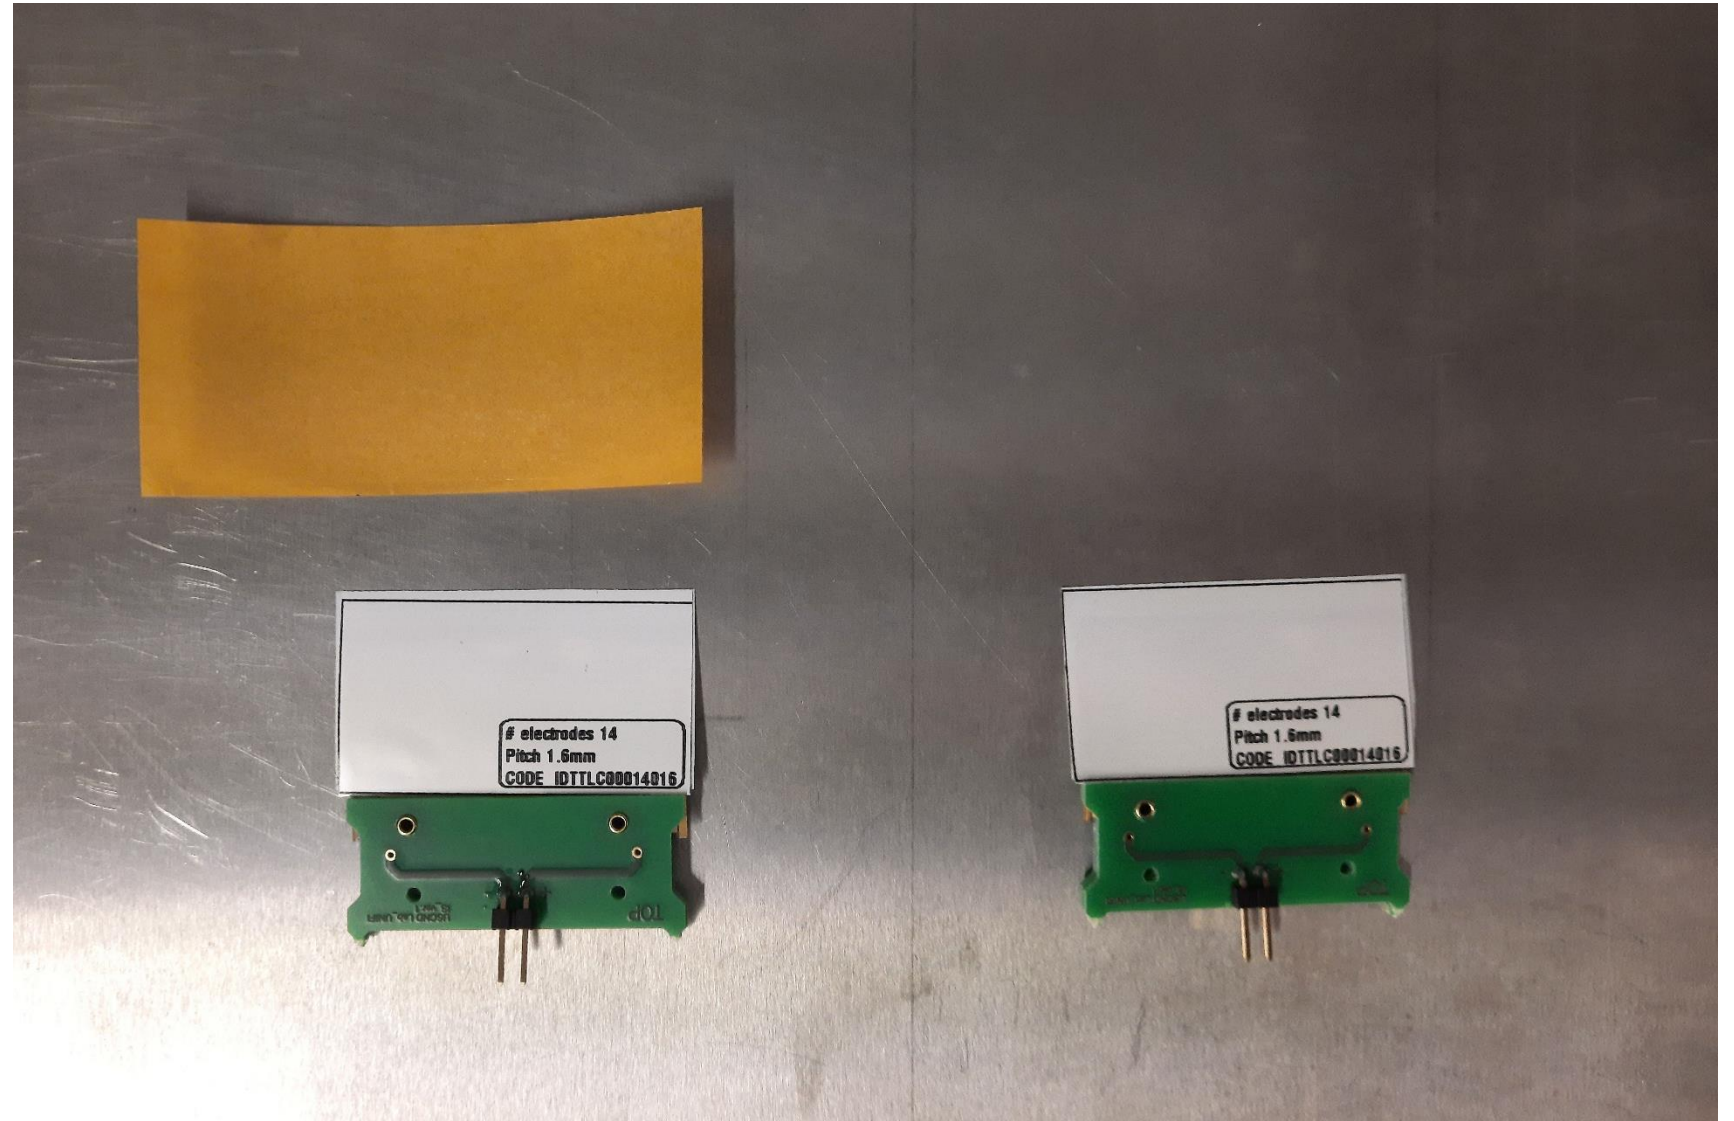

Step 1.1: Double-sided adhesive tape

Step 1.1:


Adhere the double-sided tape to the bottom of the transducer label.

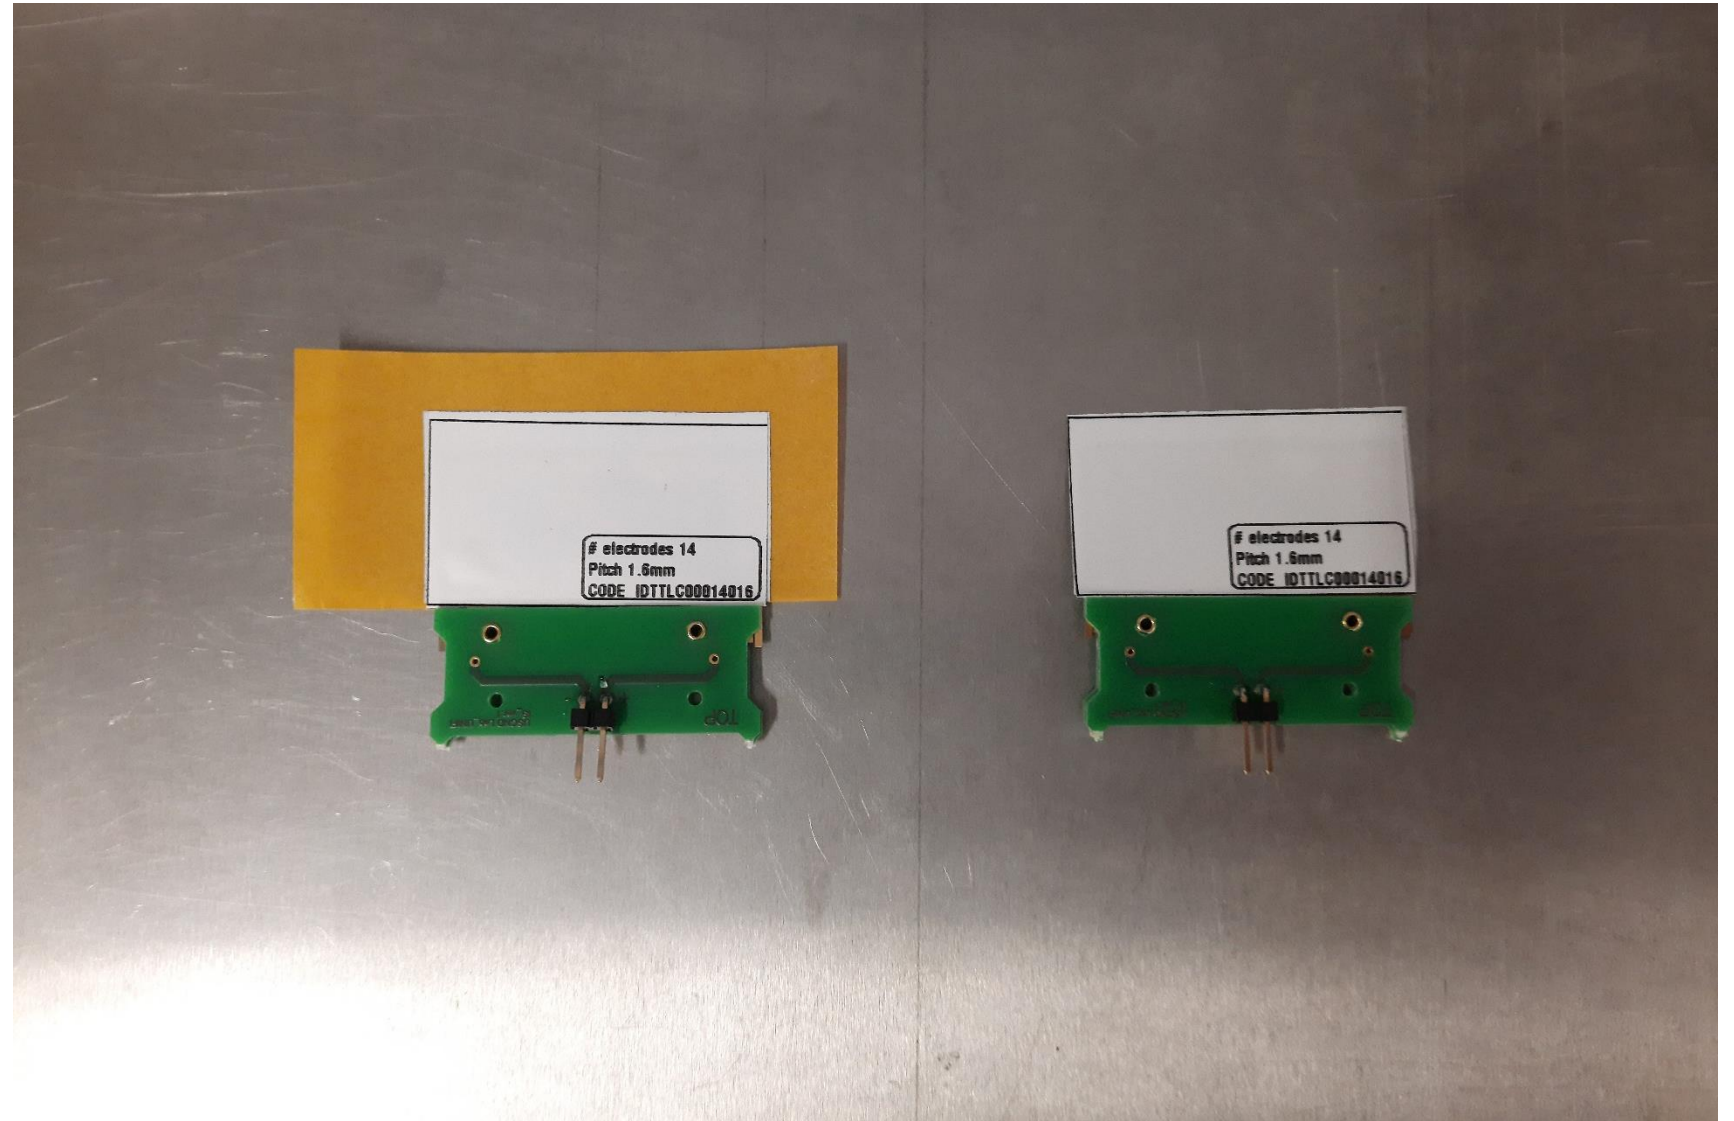

Step 1.1: Double-sided adhesive tape

Step 1.1:


Double-sided adhesive tape,
bottom view.

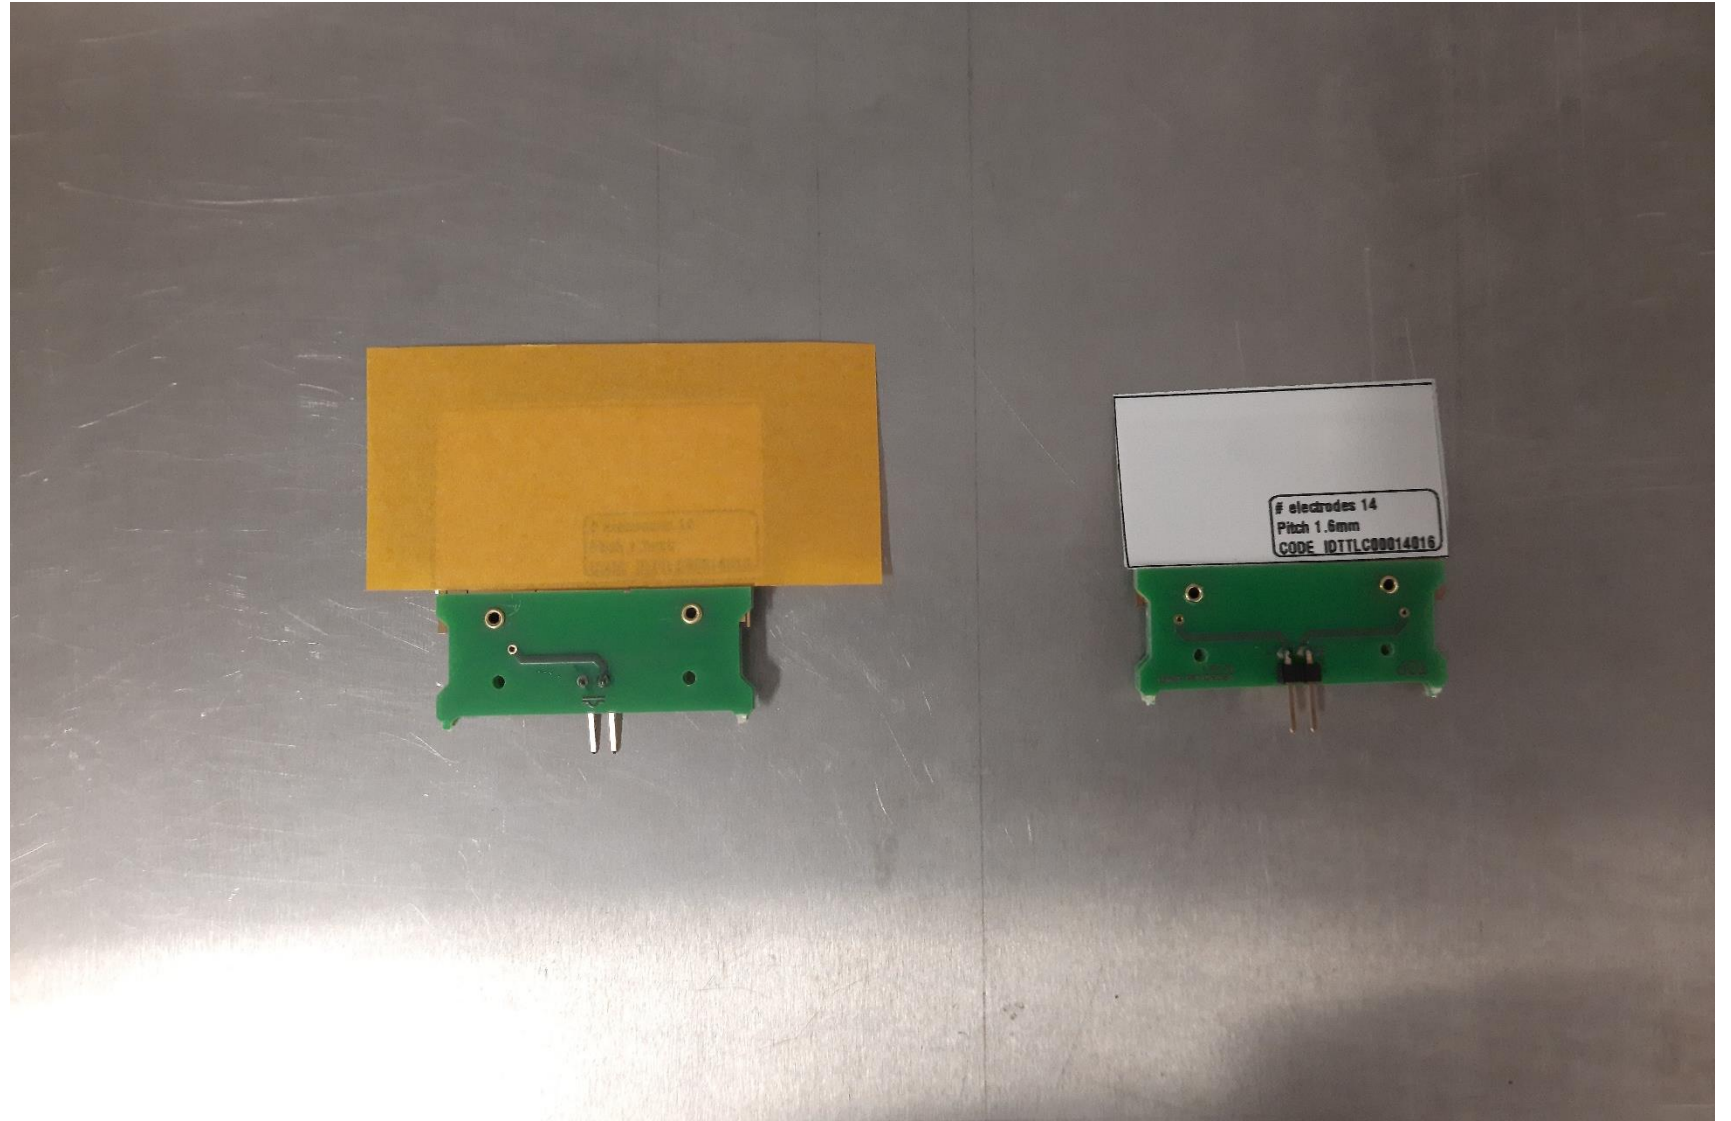

Step 1.2: Cutting double- sided adhesive tape

Step 1.2:


Cutting double-sided adhesive tape, leaving a portion of tape protruding to be used as a removal tab.

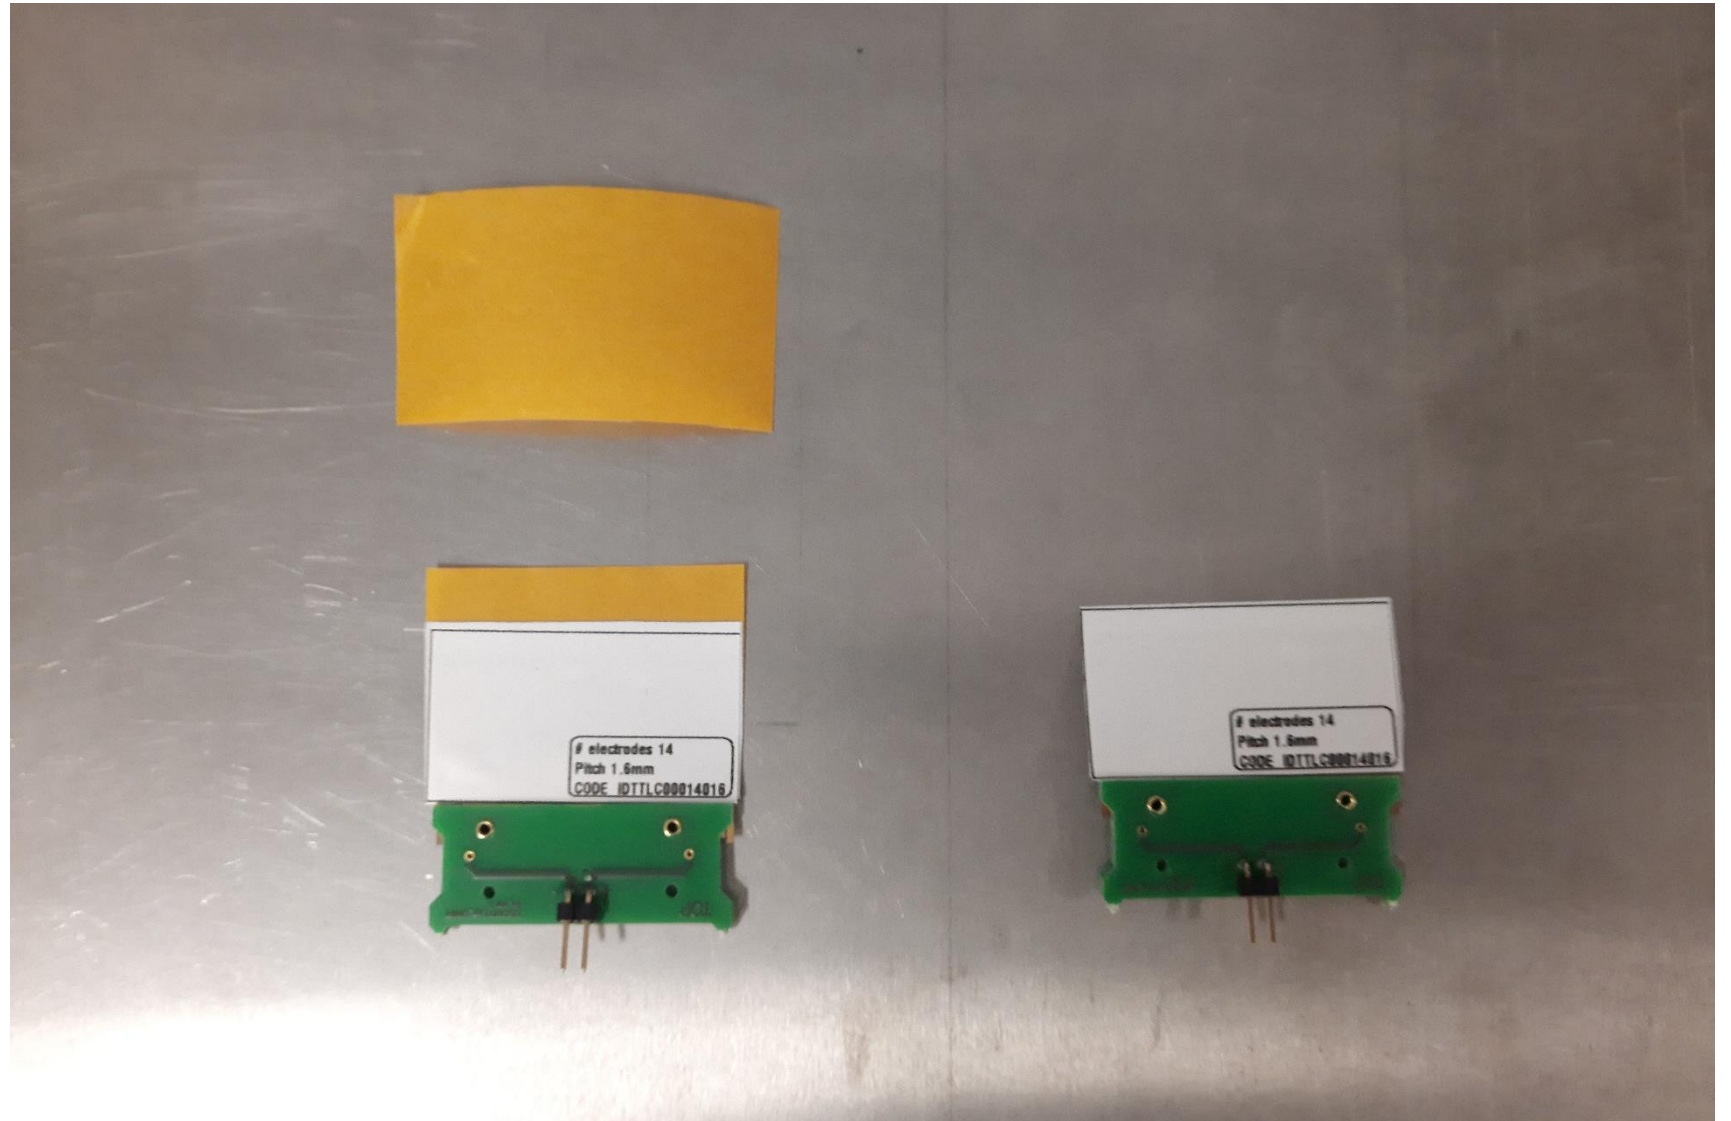

Step 1.3: Cutting double- sided adhesive tape

Step 1.3:

Before placing the transducer on the surface to be inspected, remove the protective backing of the double-sided tape.

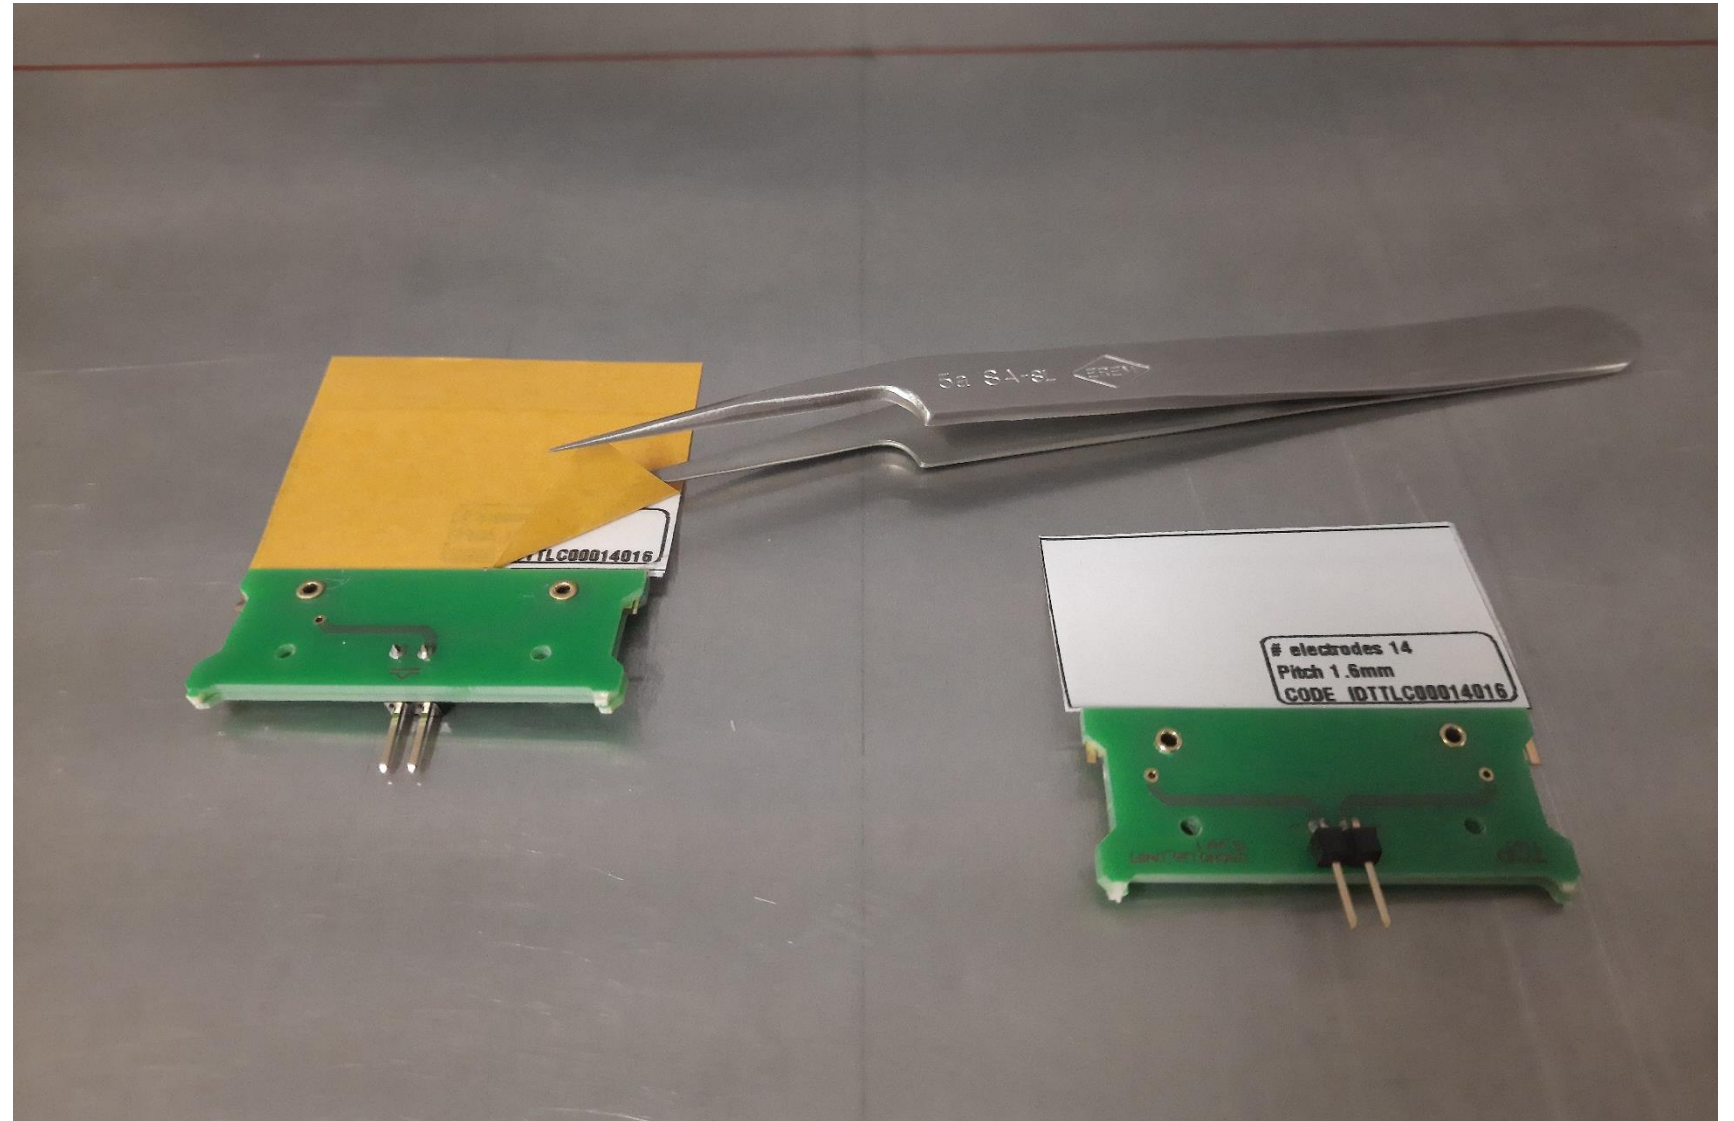


Step 2: Positioning of transducers

Step 2:

Position the transducers at the desired distance, making sure that the active part (the white part with the label) adheres perfectly to the surface.

The figure shows the classic Pitch and Catch configuration.

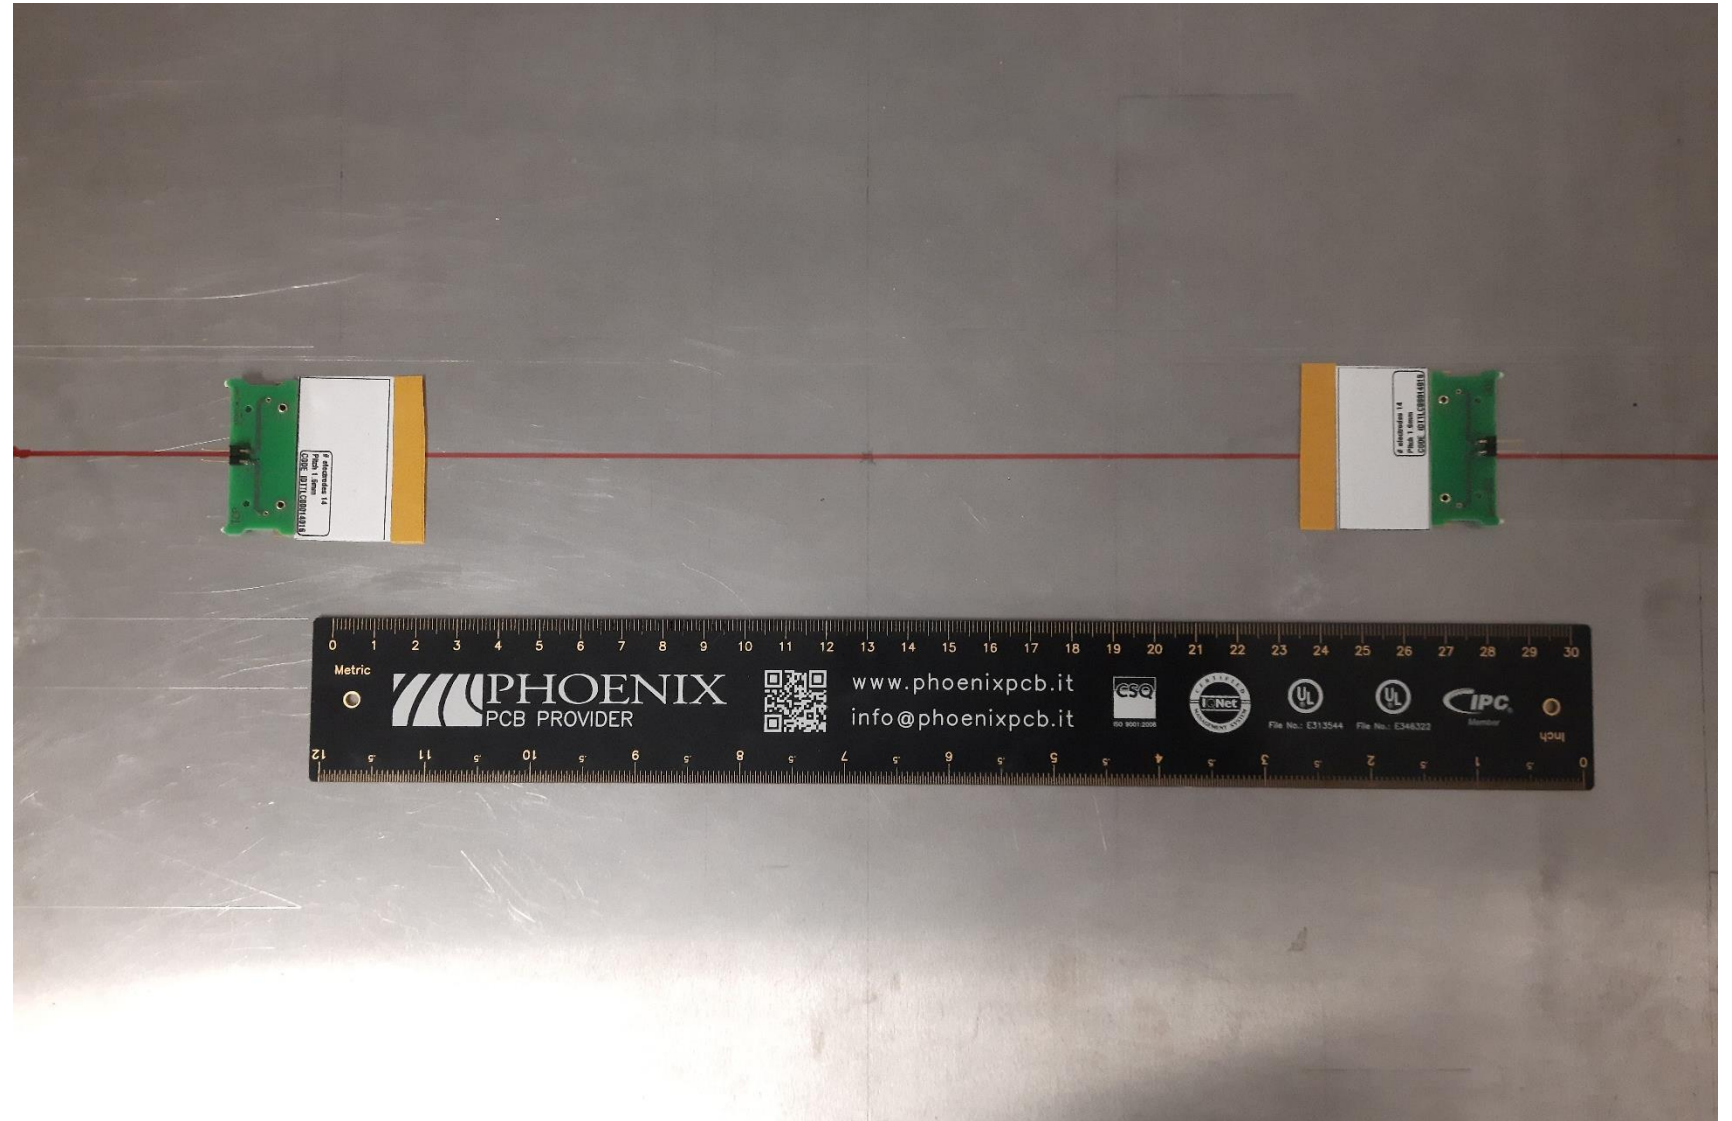

Step 3.0: Equipment Setup


Step 3.0:

After positioning the Transducers, connect the LEMO cables to the transducer Pin Headers.

Connect the other side of the LEMO cable coming from the transducer to the "INPUT" port of the Receiver block.

On the "OUTPUT" port of the Receiver block we will have the amplified output.

Connect the Ground Pin (banana connector) to the Receiver block and the other end to the metal ground plane (crocodile connector).

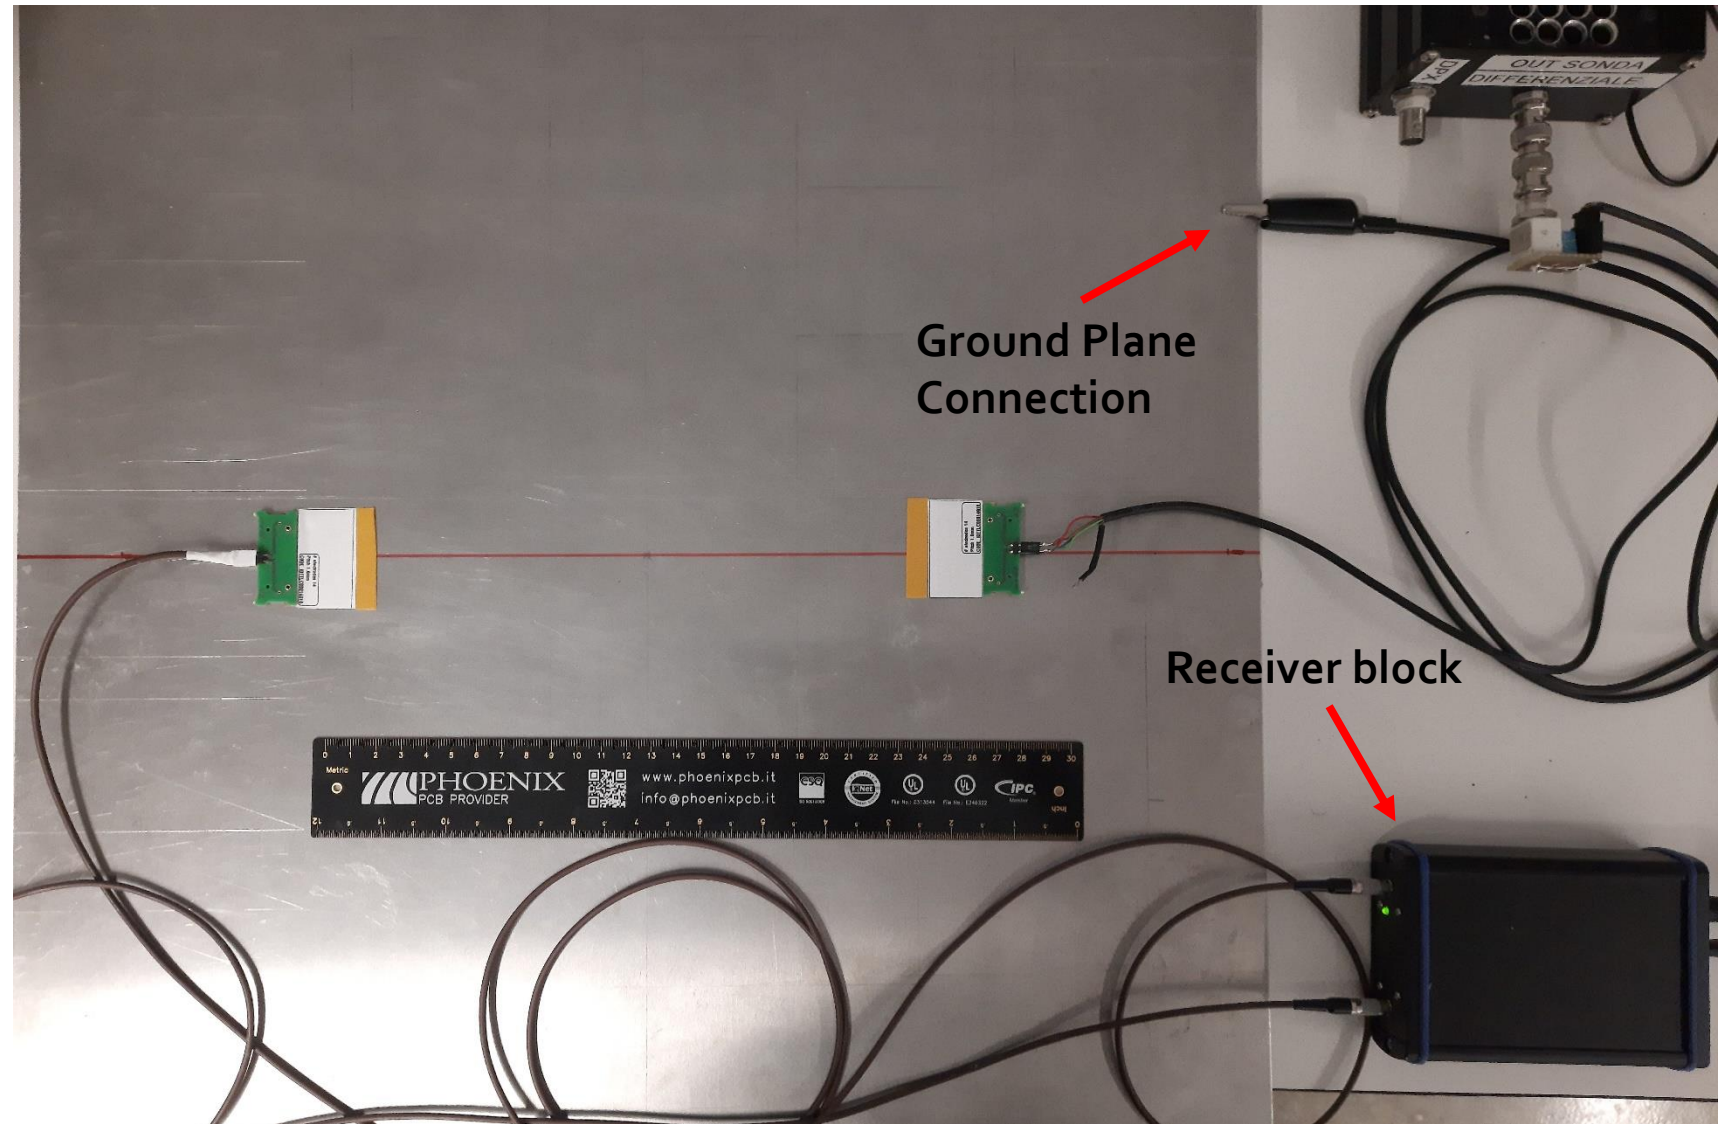


Step 3.1: Equipment Setup

Step 3.1:

Connect the power supply to the Receiver block.

The System is ready for measurement.

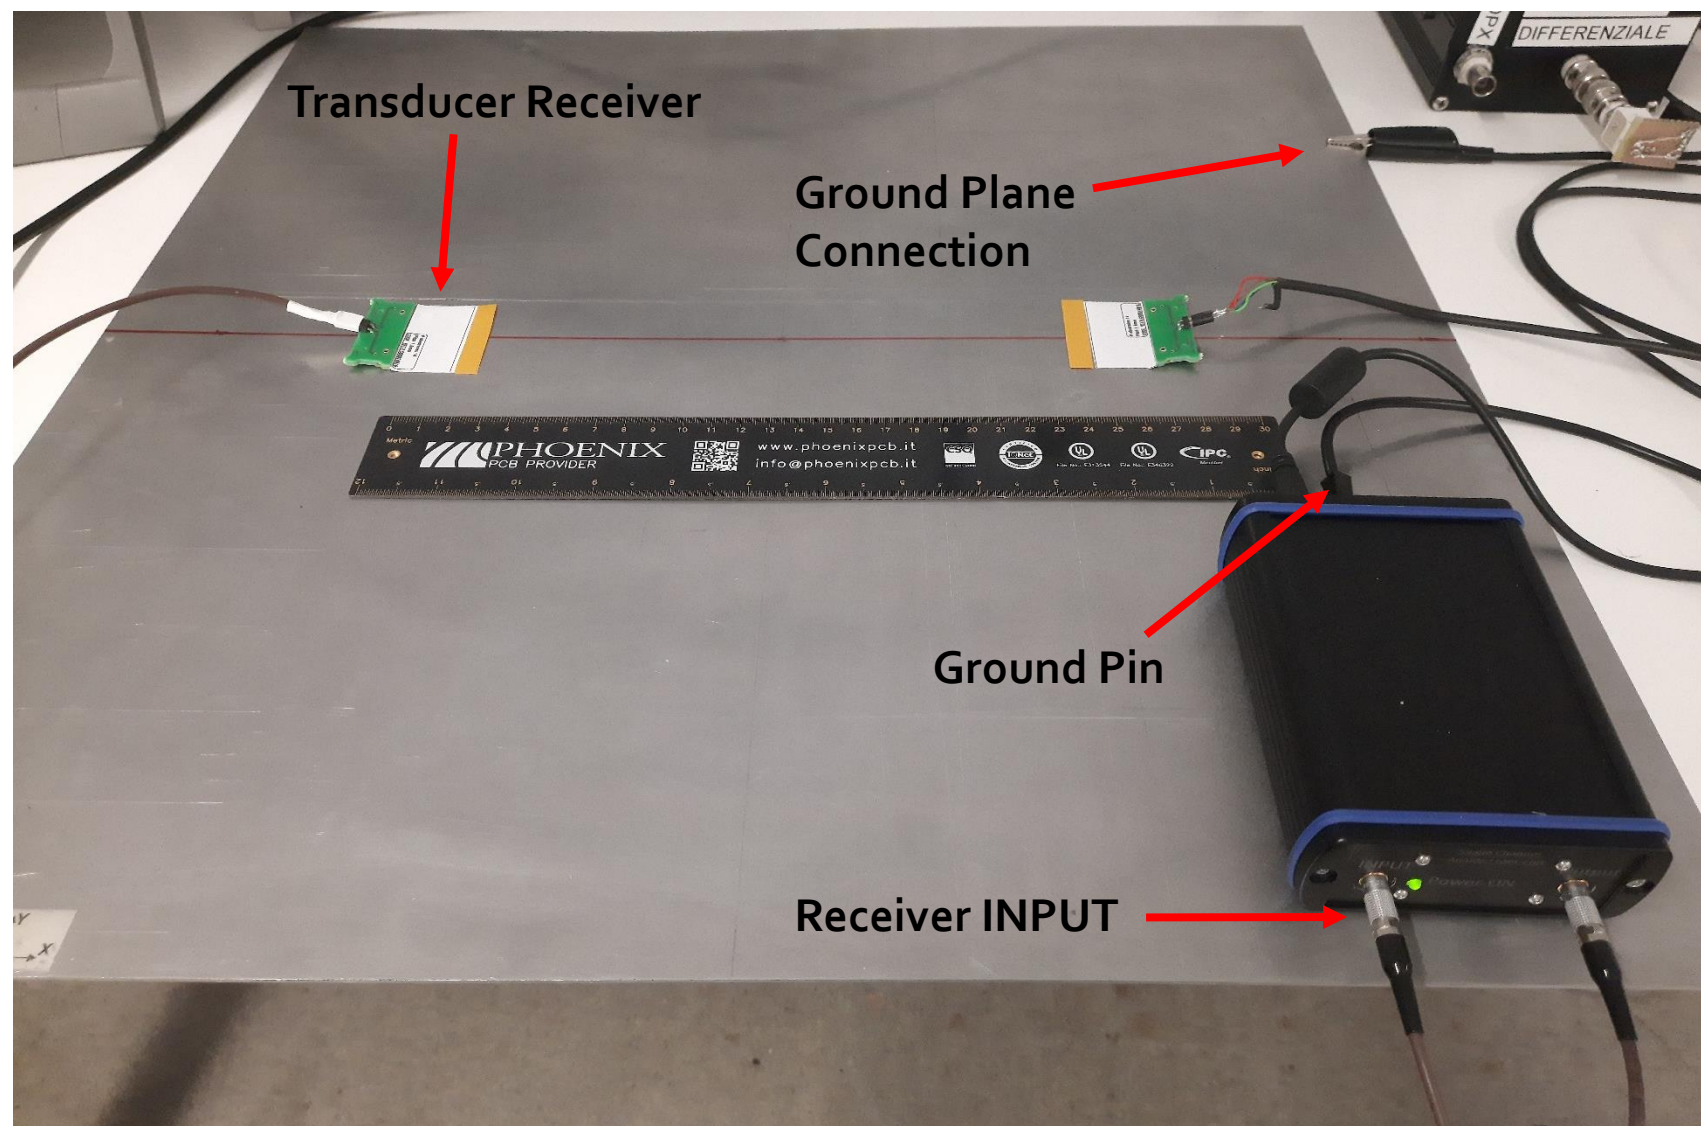

Use of this electronic device is at the user's sole risk. The manufacturer assumes no liability for direct, indirect or consequential damages resulting from improper use, incorrect installation or failure to follow the instructions provided. Be sure to follow all instructions in this manual to ensure safe and optimal operation of the device. Any unauthorized modifications or repairs may compromise the safety of the equipment. We recommend that you contact the authors for assistance.

All rights reserved. The content of this document may not be reproduced, distributed or published in any form without the prior written consent of the authors. For permission requests, please contact the authors.

Contacts:

Lorenzo Capineri: lorenzo.capineri@unifi.it

Lorenzo Taddei: lorenzo.taddei@unifi.it